


Türk+Hillinger Elektrowärme GmbH Dorotheenstr. 22 09212 Limbach-Oberfrohna	Einschraubheizkörper mit Regler/Sicherheits- temperaturbegrenzer ISOLIERTE AUSFÜHRUNG	N.Gruppe: 10
		Artikel-Kurzbez.: EHK

1. Beschreibung

Einschraubheizkörper, bestehend aus 3 Rohrheizkörpern mit verschiedenen Leistungen, die in einem Schraubkopf G 1 1/2 mit Fühlerschutzrohr eingebaut sind. Die EHK werden mit Anschlußgehäuse und einer Regler/Begrenzerkombination geliefert.

Abbildung:

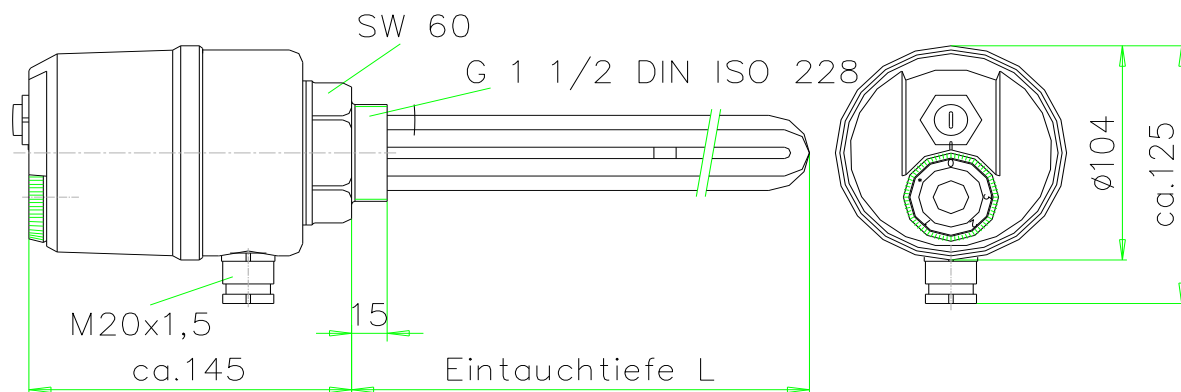

2. Technische Daten

Spannung	230V/400V~
Leistung	3,5 (L1-0,5;L2-1;L3-2)kW
Eintauchtiefe L	480mm
Anzahl der RHK	3
Oberflächenbelastung	RHK 500W - 2,8 W/cm ² RHK 1000W - 5,3 W/cm ² RHK 2000W - 10 W/cm ²

unbeh. Länge ab Dichtfl.	100mm
Einstellbereich Regler	5°C bis 85°C
Abschalttemperatur STB	110°C - 8K
Werkstoff Schraubkopf	MS 58
Gehäuse	Polycarbonat
Werkstoff RHK	2.4858
Schutzgrad	IP64
Anschlußausführung	Stopfbuchsverschraubung M20x1,5
Einbaulage	waagrecht
Ausstattung	

Art.-Nr. 1105405

Bearb.	08.07.14 Mo	Geänd.
Gepr.		Geänd.

Installation Instruction
For Immersion Heater With Thermostat And Safety Limitor
Standard And Insulated Type

1. Field of Application

For water heating within closed installations up to 10 bar.

ONLY FOR INSULATED TYPE: To avoid corrosion on enameled or coated tanks with sacrificial anode the tubular heaters are insulated against the flange/tank and connected by a defined resistance. This improves lifetime of the heater and the sacrificial anode.

2. Function

The sensors for thermostat and safety limiter are in a protective tube between the tubular heaters and measure the water temperature. The set temperature is adjusted via a adjusting knob. In fault the limiter switches off the heater permanently.

3. Mechanical Installation

The assembly of the heater needs to be effected directly by the 1 1/2" threaded nipple with an appropriate seal. The sleeve socket must be shorter than the unheated length (LU). The unheated length (LU) is indicated on the type plate. The water circulation in the tank must not be impeded (for example through a baffle).

4. Electric installation

A RCD should be used. Please observe the VDE 0100 standard and local electrical safety standards. Only an electrician should install the electric supply. The wiring should be done according to the wiring scheme. For opening the immersion heater pull the temperature knob forward and loosen the 2 screws behind it.

Wiring should be done according the wiring scheme.

5. Operating

Start operation only after the tank is fully filled. If the safety limiter has switched off the heater the reason for the failure has to be carefully investigated before resetting the limiter. To reset the safety limiter press the red button after removing the upper half of the housing. **ATTENTION:** The safety limiter will protect the installation from high temperatures. It will NOT protect the installation from dry operation (without liquid). Additional protection against dry operation should be used therefore.

6. Additional Features (not part of all heaters)

- Signal lamp glows when the device is heating.
- External reset of the safety limiter allows to reset the safety limiter with an appropriate tool without removing the housing of the heater. Disconnect power supply before!

7. Maintenance



Disconnect power before any maintenance work!

The heater needs to be checked regularly for deposits on the heater sheath which might deteriorate its function. If inserted in chalky water the lifetime of the heater may be reduced. We recommend to regularly clean/descale the heater sheath.

T+H 07/2016

Schaltungsbeispiele

Verschaltung 3-phasiger Heizstäbe mit Adamczewski PV-Optimierer AD-PVO 6000

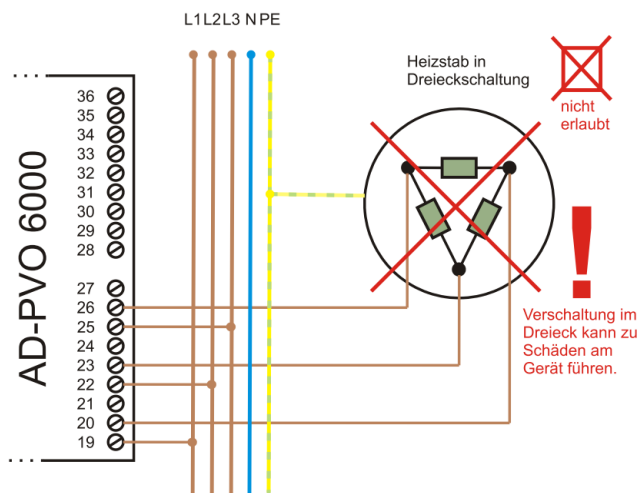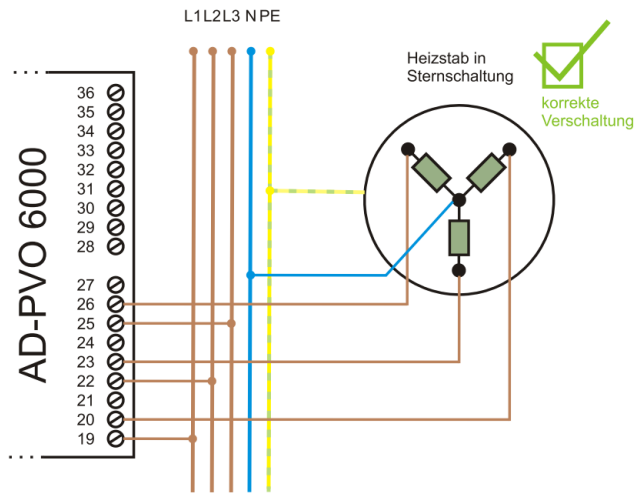

Attention!

In chalky water check heater after 3 months.

Descale heater if necessary.

Schedule new maintenance intervall

Türk+Hillinger

Elektrowärme GmbH

Dorotheenstr. 22

09212 Limbach-Oberfrohna